


## Installation of Drag bar Spacers (refer to fig below)

**Note: Put a towel or blanket on your gas tank to protect the paint from being damaged.**

1. Using a 17 mm deep socket or wrench remove the two lock nuts on the bottom of the triple tree.
2. Lower the cableguide, being careful not to lose the lower rubber/metal washers.
3. Carefully pull the drag bars out of the triple tree being sure not to lose the upper rubber/metal washers.
4. Put the spacers on the drag bars, then the upper rubber/metal washers with the metal surface against the spacer.
5. Carefully install the drag bars in the triple tree being sure not to lose the rubber/metal washers.
6. Next install the lower rubber/metal washers with the rubber part against Triple tree.
7. Next install the cable guide.

**Note: Put some locktite on the bolt ends and then install the two locknuts. Torque nuts to 54nm / 39 ftlbs.**

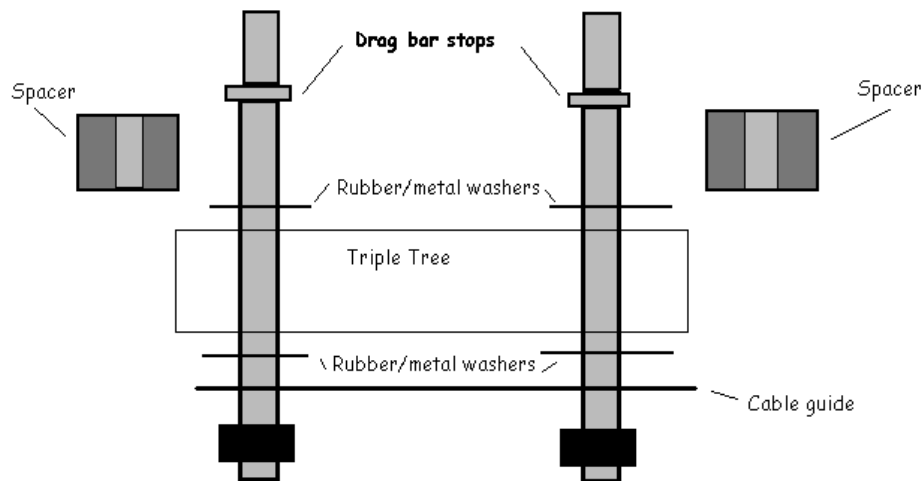

Install spacers between dragbar stop and the rubber/metal washers.

**Important: Use Loctite on the nuts after installing the spacers.**