

Installation of Triumph Spacers

1. Remove the tops of both risers and move the handlebars out of the way.
Caution: Try not to turn your handlebars upside down. Air from the brake reservoir may get into your brake line causing front brake problems. Put a towel or blanket on your bike to protect it.
2. Remove the two nuts that hold the risers on and remove the stock bolts from the risers.
3. **Refer to fig 1.** Install the new bolts through the risers, through Jim's Spacers and through the triple tree.
4. Install the locknuts and but don't tighten them all the way.
5. Install the handlebars in the risers and install the top part of the risers.

On the Speedmaster align the spacer with the risers.
6. Tighten the locknuts up insuring the handlebars are straight and centered.
7. Double check that all fasteners are tight.

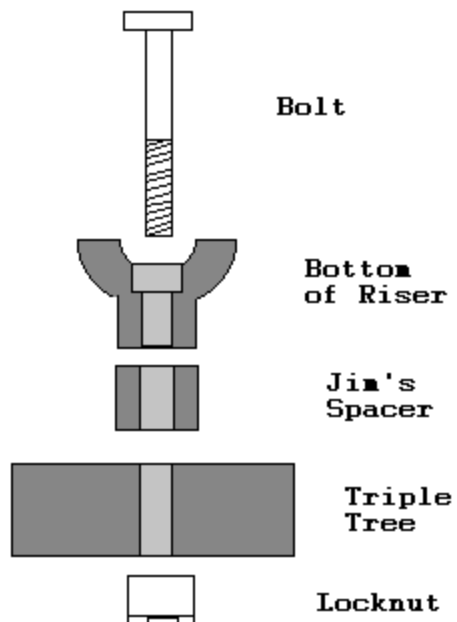


Fig 1